



TAKAI SPARE PARTS DIAGRAM AND PARTS LIST

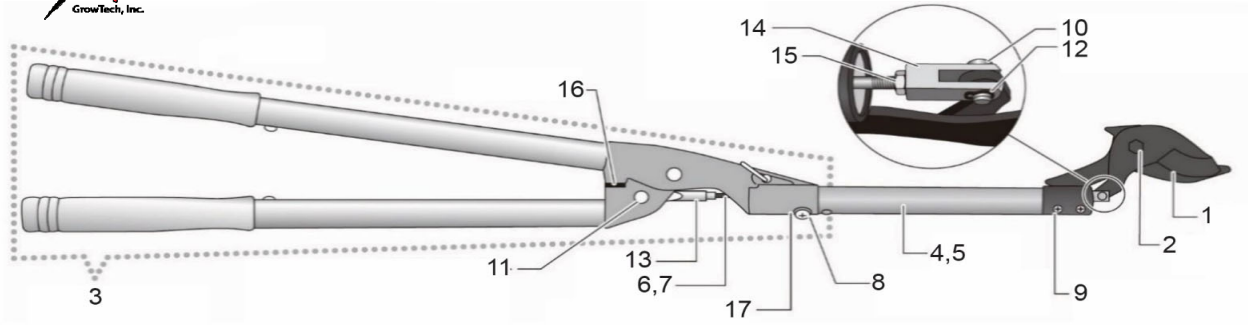









 









Diagram	Part #	Description	Pic	Diagram	#	Description	Pic
1	SP-TAKAI-1	Blade set		10	SP-TAKAI-10	Rod to blade rivet & holding ring	
2	SP-TAKAI-2	Blade center bolt/nut		11	SP-TAKAI-11	Rod to handle rivet & holding ring	
3	SP-TAKAI-3	Handle set		12	SP-TAKAI-12	Holding ring	
4	SP-TAKAI-4	Pipe to blade (1m)		13	SP-TAKAI-13	Rod to handle connector	
5	SP-TAKAI-5	Pipe to blade (2m)		14	SP-TAKAI-14	Rod to blade connector	
6	SP-TAKAI-6	Replacement rod (1m)		15	SP-TAKAI-15	Nut for SP-TAKAI-14	
7	SP-TAKAI-7	Replacement rod (2m)		16	SP-TAKAI-16	Bumper	
8	SP-TAKAI-8	Angle screw set		17	SP-TAKAI-17	Internal nut plate (angle screw)	
9	SP-TAKAI-9	Blade to pipe screw set			SP-LA-1	Holding ring pliers	