


Simple Soak Garden Row Watering Kit #SRK100

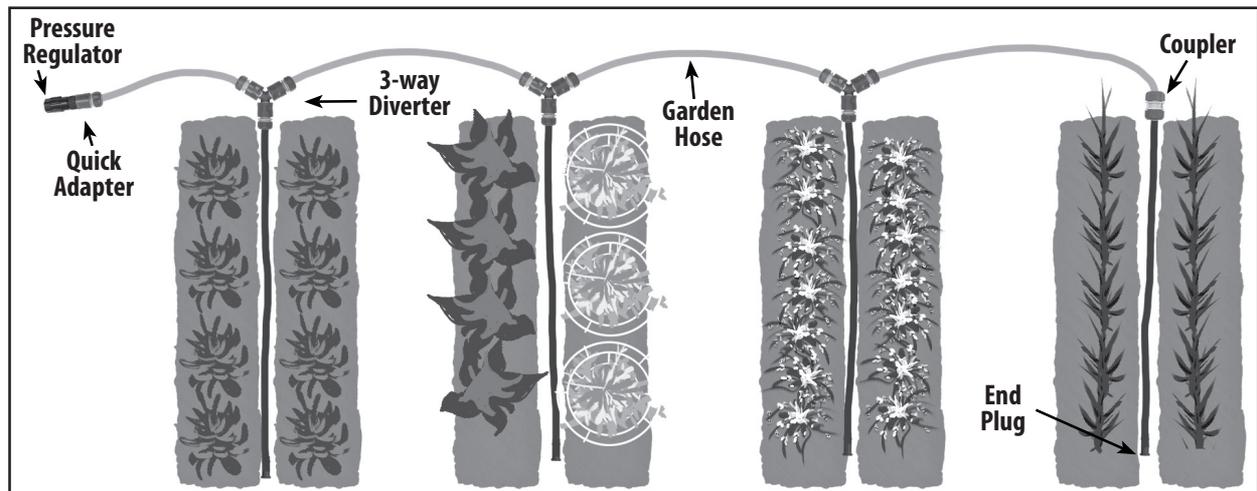

Step 1) Unpack contents of box: Compare to kit contents. If anything is missing or if you have questions, please contact A.M. Leonard, Inc. at 800-543-8955.

Step 2) Plan your design: Keep in mind this kit includes fittings to irrigate up to 4 rows. Consider that slope will affect even distribution of water. For sloped areas it is best to place the solid garden hose with grade change, keeping lateral soaker hoses running horizontally. Also, pay attention to keep dirt from entering the garden and soaker hoses during setup, which may block part of system.

Step 3) Install the pressure regulator: Soaker hose is a low pressure, low flow method of watering that should weep water, not spray. To help with this, a pressure regulator is included. Thread the regulator to incoming water source.

Step 4) Attach the Spigot Quick Adapter: Attach the black male quick connector to the water source from step 3. Next loosen the green threaded collar without removing, and insert the garden hose into the plastic retaining ring. Tighten the collar completely. If not attached, push quick connect into coupler until connected.

Step 5) Place initial section of kit garden hose: Stretch out the garden hose to the intended first row of soaker and cut to length.

Step 6) Install 3-way diverter: Loosen the threaded collar of a diverter then insert the cut garden hose into the retaining ring. Tighten the collar completely. At 2nd side of diverter, insert the garden hose and thread the collar tightly. Continue the layout of solid garden hose to your next row location. At 3rd side of diverter, loosen collar and insert the soaker hose. Tighten that collar completely, unroll the soaker hose and cut to desired length.

Step 7) Additional soaker rows: Repeat step 6.

Step 8) Final row of soaker: For your final soaker hose row, install the coupler. Insert the garden hose into retaining ring on one side of coupler and soaker hose on the other. Thread collars tightly.

Step 9) Install End Plugs: At each row end, slip a plastic clamp over the hose, then push the barbed plug into the hose. Press the clamp together to tighten. A Plier may be used if needed.

Tips:

- To straighten hoses, unroll them and lay in a sunny location to soften. It may be necessary to use anchor pins to keep hose in place.
- Soaker system can be left out year round. It is recommended to flush the system yearly to clear any potential contaminants. The pressure regulator and plastic end plugs/clamps should be removed temporarily. Reconnect system without regulator and open the valve completely. Run water for 30-60 seconds. Then reinstall plugs and clamps.
- Creating a short section of garden hose with attached plug and clamp can be used to stop flow of water to one side of diverter.

Kit Includes:



Contact:

AMLEO.com | 800-543-8955
GardenersEdge.com | 888-556-5676

Tools Required:

Snip, shear or scissors to cut the hoses.