

Adhesive Application Patterns for Optimal Moisture Drainage*

For Superior Strength Solvent-Based and Rapid-Set Polyurethane Adhesive




For Vertical Instant Lock Adhesive



Concrete Overlay


Against Building
No Water Flow

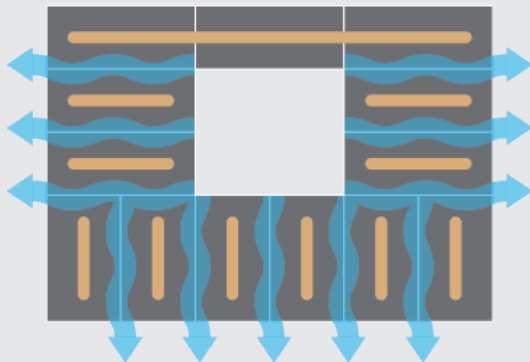

Front & Side Edges
Optimal Water Flow

Vertical Applications

Top

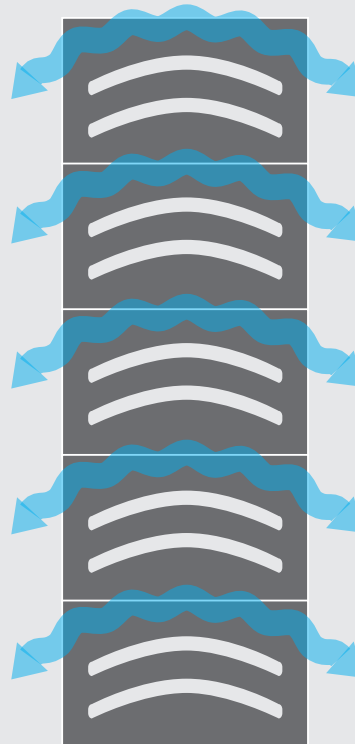

Bottom

Optimal Water Flow
Using Vertical Instant Lock

Retaining Wall

(Very Moist Soil)



Optimal Water Flow

Prevent damage from trapped moisture by applying adhesive in a pattern.

Consult the application patterns diagram to the left to see suggested application patterns for different types of projects. Choose the best methods for your particular project to allow for optimal moisture drainage.

We recommend using SRW Superior Strength Solvent-Based Adhesive or SRW Rapid-Set Polyurethane for concrete overlays and retaining wall caps. Use SRW Vertical Instant Lock for vertical applications.

Visit our website for more tips and full installation guidelines.

*For illustrative purposes only