



## Woodchuck Dual

- 1) remove Peavey Point from handle with clevis pin and put back in with point facing out, do not use the tool with the point removed, use it in either the short or long position
- 2) attach arm with second bolt, do not remove the bolt holding the cant teeth
- 3) tighten bolt so arm moves freely but doesn't wobble

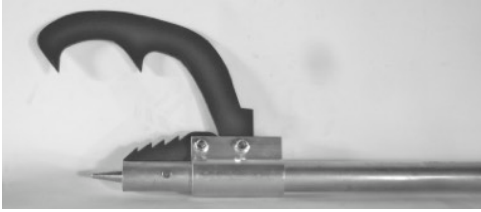


## Woodchuck Dual

- 1) remove peavey point from handle with clevis pin and put back in with point facing out, do not use the tool with the point removed, use it in either the short or long position
- 2) attach arm with second bolt, do not remove the bolt holding the cant teeth
- 3) tighten bolt so arm moves freely but doesn't wobble

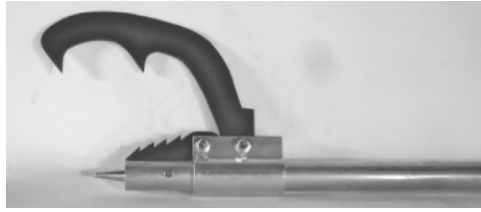


## Woodchuck Dual

- 1) remove peavey point from handle with clevis pin and put back in with point facing out, do not use the tool with the point removed, use it in either the short or long position
- 2) attach arm with second bolt, do not remove the bolt holding the cant teeth
- 3) tighten bolt so arm moves freely but doesn't wobble

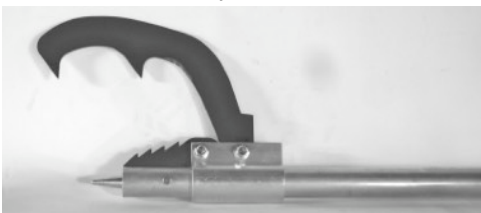


## Woodchuck Dual

- 1) remove peavey point from handle with clevis pin and put back in with point facing out, do not use the tool with the point removed, use it in either the short or long position
- 2) attach arm with second bolt, do not remove the bolt holding the cant teeth
- 3) tighten bolt so arm moves freely but doesn't wobble

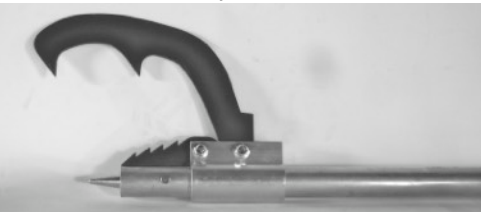


## Woodchuck Dual

- 1) remove peavey point from handle with clevis pin and put back in with point facing out, do not use the tool with the point removed, use it in either the short or long position
- 2) attach arm with second bolt, do not remove the bolt holding the cant teeth
- 3) tighten bolt so arm moves freely but doesn't wobble

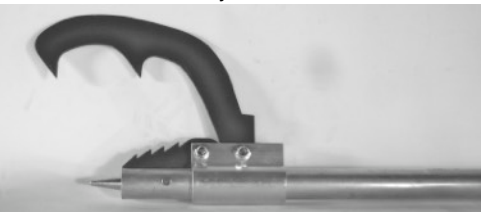


## Jack

- 1) attach angle to Jack with carriage bolts
- 2) with peavey point extended from Dual slide jack over peavey point and connect Jack with clevis pin supplied with Jack
- 3) to keep the handle from digging into the ground you can place a piece of wood somewhere along the line the handle will track

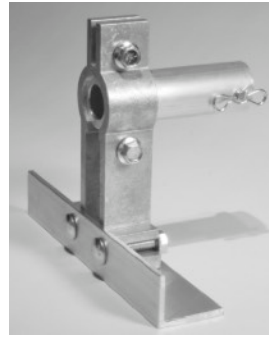


## Jack

- 1) attach angle to Jack with carriage bolts
- 2) with peavey point extended from Dual slide jack over peavey point and connect Jack with clevis pin supplied with Jack
- 3) to keep the handle from digging into the ground you can place a piece of wood somewhere along the line the handle will track

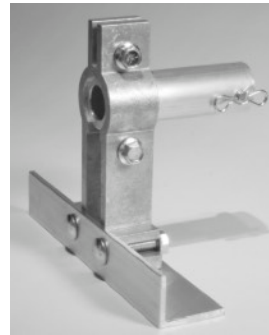

## Jack

- 1) attach angle to Jack with carriage bolts
- 2) with peavey point extended from Dual slide jack over peavey point and connect Jack with clevis pin supplied with Jack
- 3) to keep the handle from digging into the ground you can place a piece of wood somewhere along the line the handle will track

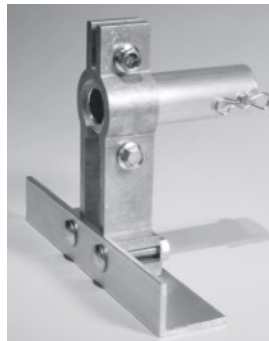

## Jack

- 1) attach angle to Jack with carriage bolts
- 2) with peavey point extended from Dual slide jack over peavey point and connect Jack with clevis pin supplied with Jack
- 3) to keep the handle from digging into the ground you can place a piece of wood somewhere along the line the handle will track



## Jack

- 1) attach angle to Jack with carriage bolts
- 2) with peavey point extended from Dual slide jack over peavey point and connect Jack with clevis pin supplied with Jack
- 3) to keep the handle from digging into the ground you can place a piece of wood somewhere along the line the handle will track

