


## Configurations

With only one kit provided, Vego modular raised bed is able to assemble into 9 different configurations to fit any backyard space. From the classic 6'5" x 3'5" to the long 8' x 2', or the jumbo square 5' by 5', you can always find one you like.

Note: Due to manufacturing process raised bed sizing may vary +/- 2 inches

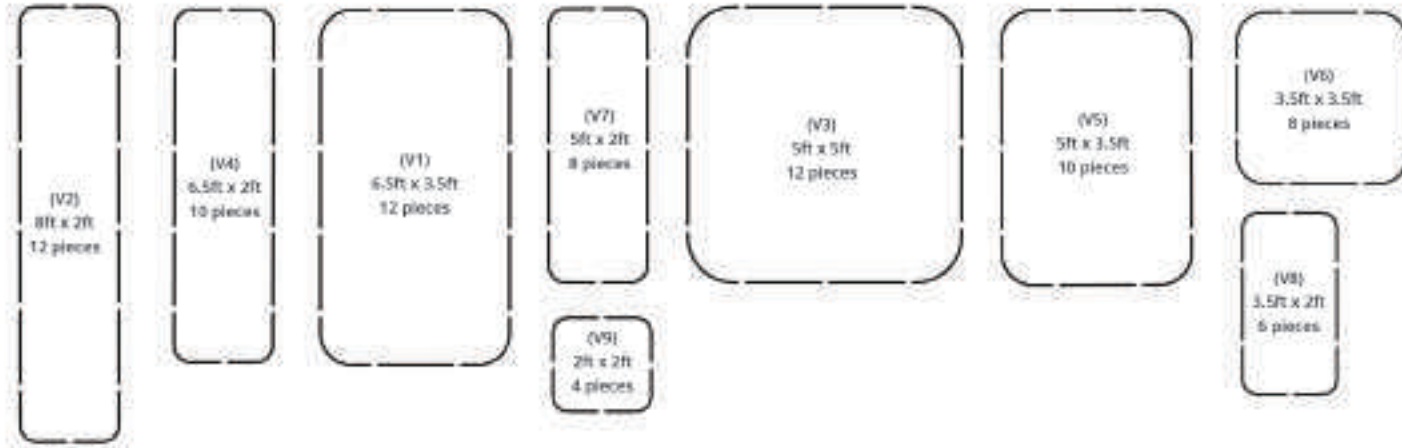

## Dimensions

Configuration	Length (ft)	Width (ft)	Height (in)	Cubic Feet	Cubic Yards
V1	6.5	3.5	17	32	1.2
V2	8	2	17	22	0.8
V3	5	5	17	35	1.3
V4	6.5	2	17	18	0.7
V5	5	3.5	17	25	0.9
V6	3.5	3.5	17	17	0.6
V7	5	2	17	14	0.5
V8	3.5	2	17	10	0.4
V9	2	2	17	6	0.2

## Contact Us

- +1 (628) 220-8868
- hello@vegogarden.com
- www.vegogarden.com
- Houston, TX 77023



vegó garden






# 9 IN 1 MODULAR METAL RAISED BED



### Caution

Please be aware that there are sharp edges in metal panels that may cause injury. The use of protective equipment such as gloves and closed toe shoes is recommended.

## Packing List

A: Corner Panel		X4
B: Side Panel		X8
C: Cap Nut Fastener Set (For Top 2 Rows Use)		X24
D: Standard Fastener Set (For Lower 4 Rows Use)		X48
E: Safety Rubber Edging		X1


## Follow Us On Social Media

 @vegogarden  
  @vego\_garden  
  #vegogarden / #raisedbedgardening / #metalgardenbed




## Assembly Guide

### 1 Step One

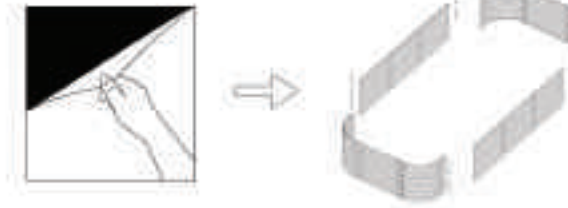

Remove protective films from all panels, and lay panels on a flat surface according to the chosen configuration.

### 2 Step Two

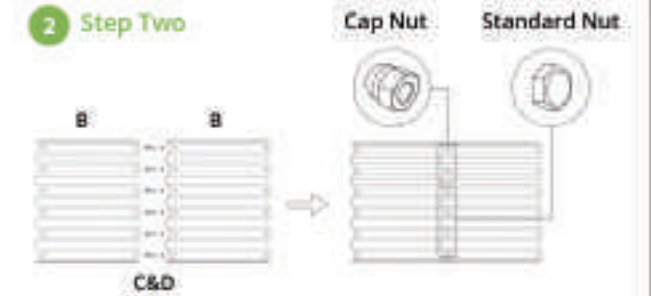


Cap nuts are used for top two rows, standard nuts are used for lower 4 rows. Assemble all straight panels: initially attach all bolts, washers and nuts loosely, and then tighten up using the wrench tool (as supplied) with a screwdriver/cordless drill.

### 3 Step Three



Make sure to tighten each nut and bolt for reinforcement of garden raised bed.

### 4 Step Four

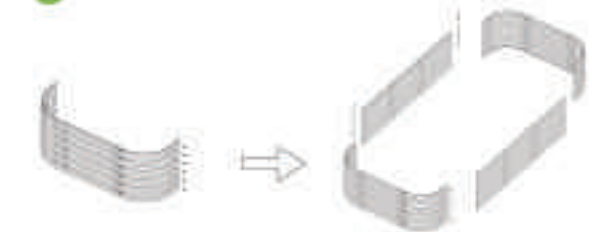

After straight panels are assembled, attach corner panels with straight panels using the same method. Make sure corner panels are attached outside of the straight panels.

### 5 Step Five



Push the safety rubber edging to the top rolled steel edge and cut the extra length off. Make sure edging is attached securely.

### 6 Step Six



Congratulations on completing the assembly! We are sure there are more configurations that you can do with your great imagination!