

Read and save these instructions


SIDESWIPE®

WIPES OUT YOUR WEEDS

Sideswipe Model THS-200
Sideswipe Pro Model THS-100

Your new Sideswipe is the practical and environmentally sound choice for applying herbicides, using the "wipe-on" method. One fill-up will eliminate weeds on up to 1800 sf (Pro, Model THS-100) or 1200 sf (Sideswipe, Model THS-200).

Illustrated Parts List

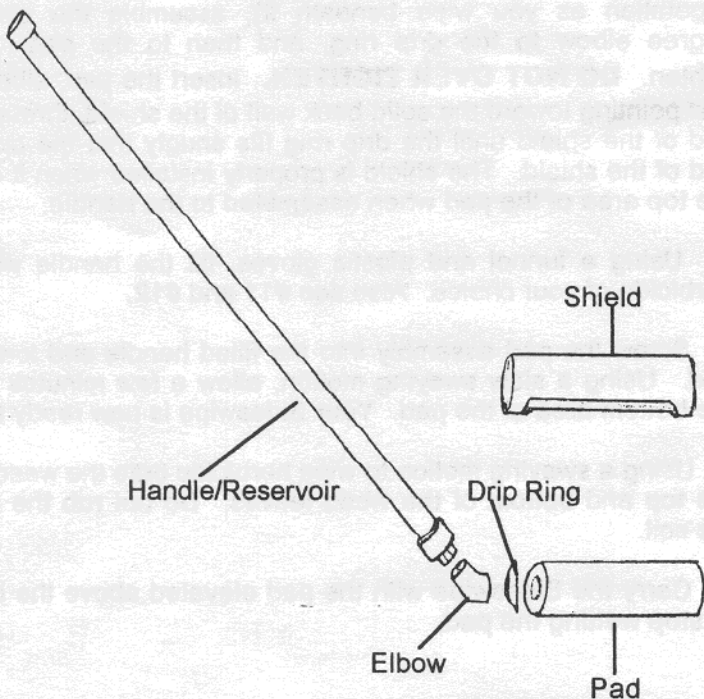

(See inside for operating and cleaning instructions)

OPERATING INSTRUCTIONS

1. Your Sideswipe or Sideswipe Pro may come fully assembled or partially assembled. Review the illustrated parts list of the Sideswipe on the front cover and note all parts.
2. Unscrew the handle from the clear 45 degree elbow. Note the washer inside the handle's opening. Be certain the washer is properly placed inside the handle's opening.
3. Unscrew the clear 45 degree elbow from the pad to expose the washer and the small hole in the end of the pad. The small hole in the end of the pad meters the herbicide into the pad. The inner surface of the pad is perforated to allow fluids to seep through to the outside nap.
4. To use the shield with the Sideswipe (to protect desirable vegetation as you wipe beneath it), assemble the clear 45 degree elbow to the drip ring, and then to the pad. Hand tighten. **DO NOT OVER TIGHTEN.** Insert the pad, elbow first and pointing toward the solid back wall of the shield, through one end of the shield until the drip ring fits snugly into the opposite end of the shield. The shield is properly installed when it covers the top area of the pad when assembled to the handle.
5. Using a funnel and plastic gloves, fill the handle with the herbicide of your choice. Also see #11 and #12.
6. Screw the pad assembly into the filled handle and lower the pad. Using a slow swaying motion, allow a few minutes to wet the bottom area of the pad. Your Sideswipe is now ready to use.
7. Using a swaying motion to wipe herbicide onto the weed, wipe the top and bottom of the weed leaves. Do not rub the pad in the soil.
8. Carry the Sideswipe with the pad elevated above the handle to stop wetting the pad.

KEEP OUT OF THE REACH OF CHILDREN

9. Hose-threaded shut-off valves are available at garden centers, and can be installed between the handle and the clear elbow for use in storage, or when carrying the Sideswipe from one location to another.

10. To get a new wiping area on the pad, unscrew the elbow, reverse it end for end, and reattach to the pad. This rotates the pad 180 degrees.

11. The Sideswipe was designed for use with systemic herbicides such as Monsanto's Roundup, using a concentrated formula. Do not use ready-mixed herbicides, as the solution is generally too weak for wipe-on application. Read and follow your herbicide's label for wipe-on application. If there is no labeled direction for wipe-on application, contact your herbicide's customer service department, or your local county extension agent or weed and pest control agency.

12. If you intend to use more than one kind of herbicide with your Sideswipe, we recommend that you purchase an extra pad, and dedicate one pad for use with each different herbicide. This helps prevent accidental damage to desirable vegetation when switching from non-selective herbicides (such as Roundup) to selective herbicides (such as 2-4,D). Always thoroughly rinse handle before using a different herbicide, following the label directions for your particular herbicide.

CARE AND CLEANING INSTRUCTIONS

1. Take care when filling the Sideswipe to prevent any debris from gaining access to the handle/reservoir. Should the metering hole in the pad end become clogged, being careful not to enlarge the hole, use a pin or air to reopen the hole.

2. Do not over tighten the handle to the elbow, nor the elbow to the pad. Over tightening will shorten the life of the elbow threads, and can result in breakage.

3. After each use, wash the pad thoroughly in warm sudsy water, allow to dry and store.

ALWAYS FOLLOW HERBICIDE

MANUFACTURER'S LABELED INSTRUCTIONS!

LIMITED WARRANTY

Sideswipe, Inc. hereby warrants that this product will be free from defects in material and workmanship for a period of 90 days from the date of purchase. Within the 90 day warranty period described above, Sideswipe Inc. will replace the product or part without charge if the unit or part is defective in workmanship or material and if the unit or part is returned to Sideswipe, Inc., postage prepaid, at the address set forth below. This limited warranty shall not apply to normal wear or if the product has been:

- a. involved in an accident or subject to misuse, neglect or improper maintenance; or
- b. tampered with or repaired by unauthorized persons.

The foregoing Limited Warranty is in lieu of all other warranties, expressed or implied, and there are not warranties which extend beyond the descriptions on the face of this limited warranty. Sideswipe, Inc. expressly disclaims any and all other warranties, including the warrant of merchantability. In no event shall Sideswipe, Inc. be liable for any special, incidental or consequential damages nor for any damages resulting from misuse or modification of this product. The sole and exclusive remedy for any breach of any warranty by Sideswipe, Inc. shall be replacement of the product as set forth above.

This warranty is exclusive to the Sideswipe/Sideswipe Pro and does not insure the performance of other products used in conjunction with this applicator.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long any implied warranty may last, so the above exclusions and limitations may not apply to you.

Sideswipe, Inc.
US Hwy. 385 South
R.R. 1, Box 99
Custer, SD 57730 USA

Telephone/Fax: 605-673-3411
WEB SITE: www.sideswipeinc.com
E-mail: info@sideswipeinc.com

PARTS ARE AVAILABLE FOR REPLACEMENT.

CONTACT YOUR DEALER, OR CALL US AT 1-605-673-3411 FOR PARTS PRICES AND SHIPPING COSTS.

PART #	DESCRIPTION
THS-100	Sideswipe Pro, Complete
TH-101	Sideswipe Pro Handle/Reservoir (52")
TH-104	Sideswipe Pro Pad (9")
TH-105	Sideswipe Pro Shield (9")
THS-200	Sideswipe, Complete
TH-201	Sideswipe Handle/Reservoir (39")
TH-204	Sideswipe Pad (6")
Th-205	Sideswipe Shield (6")
TH-102	45 Degree Elbow (fits both models)
TH-103	Drip Ring (Fits both models)